

# MANUAL FOR USE

## VACUUM SUCTION CUP - 36325



Before installing and using the product, please read all the instructions in the manual carefully and keep the manual properly.


### PAY ATTENTION TO CLEANING

Air outlet need to avoid entering ash and water.

Pay attention to clean surface of the suction cup before use



1. Tile surface with water, oil or glue

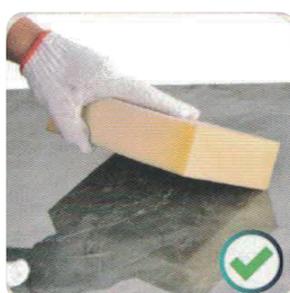

2. Clean tile surface



3. Tile surface clean and dry

## POST-USE STORAGE

Attention: Do not put it in tile glue, mud and other bad environment, so as no to damage so affect the normal use of the product.



1. Clean the surface of the suction cup



2. Cover with protective cover



3. Save when finished

## REMEDIAL MEASURES IF ASH OR WATER ENTERS ACCIDENTALLY



1. Pull out the hand pressure pump slowly



2. After cleaning the hand pressure pump, grease can be applied appropriately




3. Clean the tank

## REPLACEMENT OF SUCTION CUP PARTS

### REPLACEMENT OF THE SUCTION CUP MEMBRANE:



1. Pull out the hand pressure pump slowly

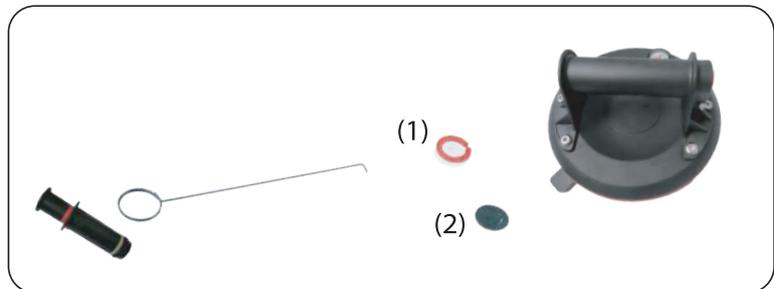

2. Using the hook, pull out the retaining ring (1) of the suction cup body. Take out the rubber valve and check if it is damaged. If so, then insert a new one (2). Finally insert the retaining ring and the piston pressure pump.

### SUCTION PISTON SEAL RING REPLACEMENT:



1. Pull out the hand pressure pump slowly



2. Loosen the bolt from the piston body, remove washer, replace the sealing ring (3). Insert the washer and secure with the screw



3. Finally, insert the piston pressure pump into the handle.